



1

4



Place a small strip of velcro where the circle is. The speaker is then placed in the cheek pad in a vertical position with the wire to the bottom of the speaker. The wire is then placed through the chin strap hole. The fabric is put back in place and taped back up in its original state.



DO NOT PULL CHEEK PAD FROM SHELL UNTIL CLIP IS SEPARATED FROM HELMET SHELL.
Carefully separate the cheek pad from the helmet shell. You must be very careful not to break the black clip that holds the cheek pad in place. With a blunt instrument carefully position it between the cheek pad and black clip and twist the blunt instrument gently until the clip separates from the cheek pad.

5




Velcro the microphone to the inner shell as pictured.

2



Once the clip is separated from cheek pad, wiggle and carefully pull the cheek pad out of the helmet. Be careful not to snap the polystyrene.

6

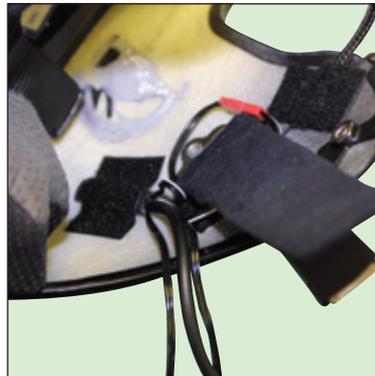

Velcro the 7-pin loom to the inner shell behind the chin strap.

3



With the cheek pad in hand, peel the tape off the back where the chin strap goes through the cheek pad and push through the chin strap hole the two bits of fabric liner. Once this is done, this will expose the circle where you position the speakers.

7



Make sure that the helmet is able to open and close without catching the microphone on the flip part of the helmet.

Once all this has been done, you are ready to put the helmet back together. Clip all the relevant clips together. The longer black wire with the white clip goes around the back of the helmet tucked away to the right hand speaker. Once the cheek pads are in position, make sure that the cheek pads clip back into the black clips.